I TRIOFIT COIL

SCREWDRIVER WITH LOADER

• A cordless screwdriver compatible with three different automatic loader connections. An interchangeable system that allows quicker and more efficient screw installation





CODES AND DIMENSIONS

CODE	description	Ø screws	screws length	weight	pcs
		[mm] [in]	[mm] [in]	[kg]	
HH12600170 ⁽¹⁾	cordless screwdriver with automatic coil loader 40 - 80	4,5 - 5,0 (6,0*) 0.18 - 0.20 (0.24)	40 - 80 1 9/16 - 3 1/8	2,40	1
HH3343	automatic coil loader 40 - 80 (without machine)	4,5 - 5,0 (6,0*) 0.18 - 0.20 (0.24)	40 - 80 1 9/16 - 3 1/8	1,35	1
HH12600171 ⁽¹⁾	automatic coil loader 25 - 50	3,5 - 4,2 0.14 - 0.17	25 - 50 1 - 2	1,90	1
HH3341	automatic coil loader 25 - 50 (without machine)	3,5 - 4,2 0.14 - 0.17	25 - 50 1 - 2	0,85	1
HH12600172 ⁽²⁾	screwdriver with collated strip loader	3,5 - 4,2 0.14 - 0.17	25 - 55 1 - 2 3/16	1,73	1
HH12600169	strip feed loader (without machine)	3,5 - 4,2 0.14 - 0.17	25 - 55 1 - 2 3/16	0,68	1
HH12600168	standalone screwdriver	-	-	1,05	1

^(*) Ø6,0 mm with HZB6PLATE.

⁽¹⁾ The supply includes: screwdriver, automatic loader, 2x 4Ah batteries, battery charger, metal case.

⁽²⁾ The supply includes: screwdriver, automatic loader, 2x 2Ah batteries, battery charger, metal case.

ACCESSORIES FOR SCREWDRIVERS



CODE	description	weight [kg]	pcs
1 HH14415260	adapter for Mafell A 18 M bl screwdriver + Metabo BS 18 LTX BL Q	0,5	1
2 HH14515425	spare battery 18V - 4 Ah	0,6	1
3 HH14515424	spare battery 18V - 2 Ah	0,4	1
4 HH14515426	battery charger	0,3	1
5 HH14411591	extension for automatic loaders	1,2	1
6 HZB6PLATE	guide plate for 6,0 mm screws	0,1	1

BITS WITH METRIC CONNECTION

CODE	description	HH12600170/HH3343	HH12600171/HH3341	HH12600172	pcs
HH14001462	M5 PH - 2	-	-	included	5
HH14505991	M5 TX 15	not included	-	-	5
HH14411964	M5 TX 20	included	-	-	5
HH14001468	M5 TX 25	-	not included	-	5
HH14000620	M6 TX 20	-	-	-	5
HH14000619	M6 TX 25	-	-	-	5
HH14001469	M6 TX 30	-	not included	-	5
HH14001855	BIT TX 20 for KKT STRIPE	-	-	not included	1



ADAPTABLE FOR Ø6,0 mm HBS

When using 6,0 mm HBS COIL screws, the guide plate must be replaced.

Loosen the plate with the adjustment screw and position HZB6PLATE.

It is also necessary to change the bit with an M6 TX 30 type on the drill chuck.